



## BDT2017

### Crosswise Ratios (by units)

Zone 1			Zone 5		
Average	Ratio		Average	Ratio	
3L-7L	Left = 43,0	1,9	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right = 43,0	1,9	3R-7R	Right = 0,0	#JAKO/0!
18L-18R	Center = 85,0		18L-18R	Center = 0,0	
Zone 2			Zone 6		
Average	Ratio		Average	Ratio	
3L-7L	Left = 22,0	2,5	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 22,0	2,5	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 55,0		18L-18R	Center = #JAKO/0!	
Zone 3			Zone 7		
Average	Ratio		Average	Ratio	
3L-7L	Left = 14,0	2,8	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 14,0	2,8	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 40,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
Average	Ratio		Average	Ratio	
3L-7L	Left = 5,8	3,4	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 5,8	3,4	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 20,0		18L-18R	Center = #JAKO/0!	

### Crosswise Ratios (by ml)

Zone 1			Zone 5		
Average	Ratio		Average	Ratio	
3L-7L	Left = 0,162	1,9	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,162	1,9	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,321		18L-18R	Center = 0,000	
Zone 2			Zone 6		
Average	Ratio		Average	Ratio	
3L-7L	Left = 0,074	2,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,074	2,5	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,184		18L-18R	Center = 0,000	
Zone 3			Zone 7		
Average	Ratio		Average	Ratio	
3L-7L	Left = 0,053	2,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,053	2,8	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,151		18L-18R	Center = 0,000	
Zone 4			Zone 8		
Average	Ratio		Average	Ratio	
3L-7L	Left = 0,022	3,4	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,022	3,4	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,075		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.



