



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 28-joulu-19
Pattern Type:
Pattern Difficulty:
Pattern Designer:
Pattern Volume (ml): 24,64

Surface Information

Surface Type: Synthetic
Surface Brand:
Age:

Pattern Parameters

Pattern Number:
Pattern Name: Carbo 2020
Mode: Clean & Oil
Forward Speed: Quick Clean
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern:


Supplies Information

Lane Cleaner: Judge
Cleaner Mixture Ratio: 6 : 1
Cleaner Transition Distance: Authority22
Cleaner Spray End Distance: 54 Envoy
Lane Conditioner: hp209hv

Notes:

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 33 columns (7 Pin Side, Board Number, 10 Pin Side).

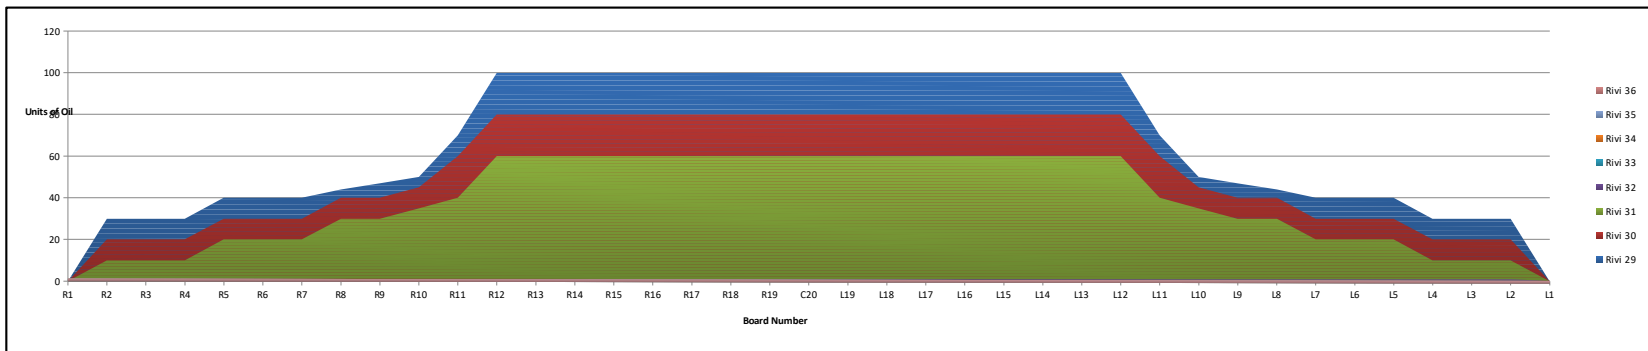



Carbo 2020

Crosswise Ratios (by units)

Zone 1			Zone 2			Zone 3			Zone 4			Zone 5			Zone 6			Zone 7			Zone 8					
	Average	Ratio		Average	Ratio		Average	Ratio		Average	Ratio		Average	Ratio		Average	Ratio		Average	Ratio		Average	Ratio			
3L-7L	Left = 36,0	2,7	3L-7L	Left = 26,0	3,0	3L-7L	Left = 16,0	3,7	3L-7L	Left = 1,0	1,0	3L-7L	Left = #JAKO/0!	#JAKO/0!	3L-7L	Left = #JAKO/0!	#JAKO/0!	3L-7L	Left = #JAKO/0!	#JAKO/0!	3L-7L	Left = #JAKO/0!	#JAKO/0!	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 36,0	2,7	3R-7R	Right= 26,0	3,0	3R-7R	Right= 16,0	3,7	3R-7R	Right= 1,0	1,0	3R-7R	Right= #JAKO/0!	#JAKO/0!	3R-7R	Right= #JAKO/0!	#JAKO/0!	3R-7R	Right= #JAKO/0!	#JAKO/0!	3R-7R	Right= #JAKO/0!	#JAKO/0!	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 100,0		18L-18R	Center = 80,0		18L-18R	Center = 60,0		18L-18R	Center = 1,0		18L-18R	Center = #JAKO/0!		18L-18R	Center = #JAKO/0!		18L-18R	Center = #JAKO/0!		18L-18R	Center = #JAKO/0!		18L-18R	Center = #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 2			Zone 3			Zone 4			Zone 5			Zone 6			Zone 7			Zone 8					
	Average	Ratio		Average	Ratio		Average	Ratio		Average	Ratio		Average	Ratio		Average	Ratio		Average	Ratio		Average	Ratio			
3L-7L	Left = 0,136	2,7	3L-7L	Left = 0,098	3,0	3L-7L	Left = 0,080	3,7	3L-7L	Left = 0,000	#JAKO/0!	3L-7L	Left = 0,000	#JAKO/0!	3L-7L	Left = 0,000	#JAKO/0!	3L-7L	Left = 0,000	#JAKO/0!	3L-7L	Left = 0,000	#JAKO/0!	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,136	2,7	3R-7R	Right= 0,098	3,0	3R-7R	Right= 0,080	3,7	3R-7R	Right= 0,000	#JAKO/0!	3R-7R	Right= 0,000	#JAKO/0!	3R-7R	Right= 0,000	#JAKO/0!	3R-7R	Right= 0,000	#JAKO/0!	3R-7R	Right= 0,000	#JAKO/0!	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,377		18L-18R	Center = 0,302		18L-18R	Center = 0,302		18L-18R	Center = 0,000		18L-18R	Center = 0,000		18L-18R	Center = 0,000		18L-18R	Center = 0,000		18L-18R	Center = 0,000		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

