



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 24-touko-21
Pattern Type
Pattern Difficulty
Pattern Designer JKH
Pattern Volume (ml) 21,32

Surface Information

Surface Type Synthetic
Surface Brand
Age

Pattern Parameters

Pattern Number
Pattern Name Kesäkisa
Mode Clean & Oil
Forward Speed Heavy Clean (Envoy)
Start Cleaner Spray 0
Start Squeegee 0
Start Oiling 6
Split Pattern


Supplies Information

Lane Cleaner Judge
Cleaner Mixture Ratio 6 : 1
Cleaner Transition Distance Authority22
Cleaner Spray End Distance 54 Envoy
Lane Conditioner DEFYv30

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 7 Pin Side, Board Number, and 10 Pin Side columns. Rows 1-8.

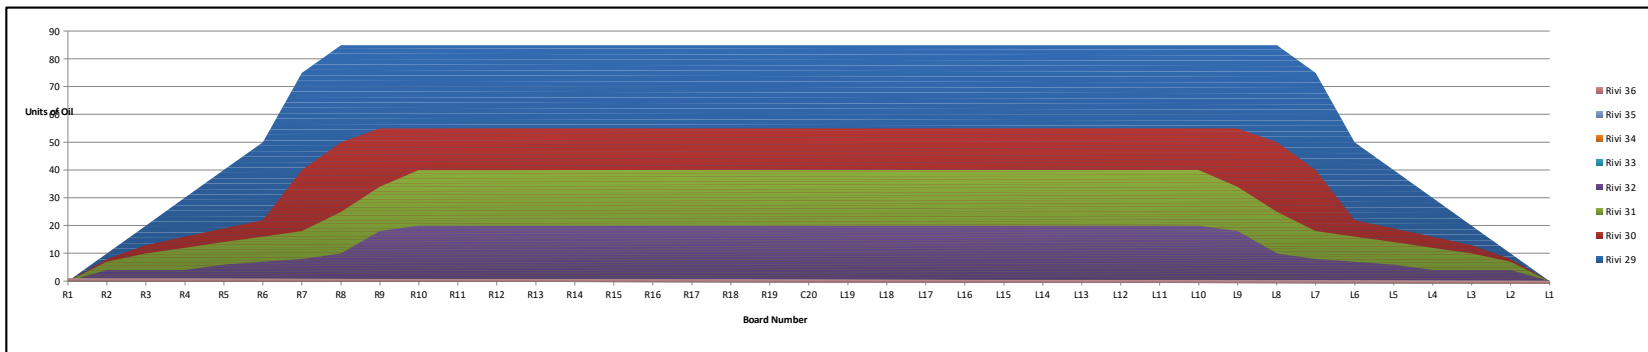



Kesäkisa

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 43,0	1,9	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right= 43,0	1,9	3R-7R	Right= 0,0	#JAKO/0!
18L-18R	Center = 85,0		18L-18R	Center= 0,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 22,0	2,5	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 22,0	2,5	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 55,0		18L-18R	Center= #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 14,0	2,8	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 14,0	2,8	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 40,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 5,8	3,4	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 5,8	3,4	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 20,0		18L-18R	Center= #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,162	1,9	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,162	1,9	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,321		18L-18R	Center= 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,074	2,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,074	2,5	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,184		18L-18R	Center= 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,053	2,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,053	2,8	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,151		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,022	3,4	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,022	3,4	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,075		18L-18R	Center= 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

