



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 16-joulu-18
Pattern Type
Pattern Difficulty
Pattern Designer JKL
Pattern Volume (ml) 21,53

Surface Information

Surface Type Synthetic
Surface Brand
Age

Pattern Parameters

Pattern Number
Pattern Name JBT 2019
Mode Clean & Oil
Forward Speed Heavy Clean (Envoy)
Start Cleaner Spray 0
Start Squeegee 0
Start Oiling 6
Split Pattern


Supplies Information

Lane Cleaner Judge
Cleaner Mixture Ratio 6 : 1
Cleaner Transition Distance Authority22
Cleaner Spray End Distance 54 Envoy
Lane Conditioner DEFYv30

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 34 columns (7 Pin Side, Board Number, 10 Pin Side).

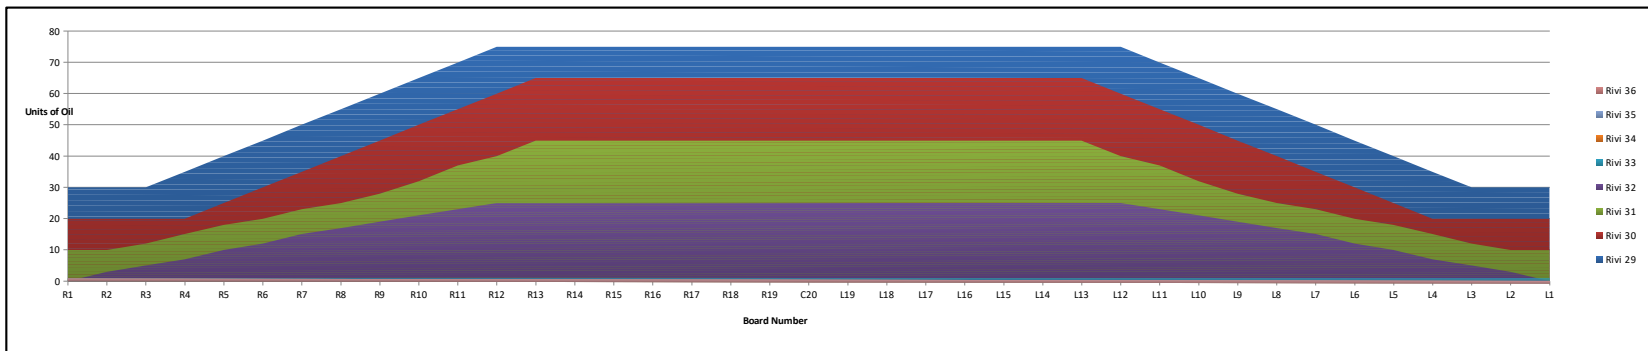



JBT 2019

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 40,0	1,8	3L-7L	Left = 1,0	1,0
3R-7R	Right = 40,0	1,8	3R-7R	Right = 1,0	1,0
18L-18R	Center = 75,0		18L-18R	Center = 1,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 26,0	2,5	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 26,0	2,5	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 65,0		18L-18R	Center = #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 17,6	2,5	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 17,6	2,5	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 45,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 9,8	2,5	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 9,8	2,5	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 25,0		18L-18R	Center = #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,151	1,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,151	1,8	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,283		18L-18R	Center = 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,098	2,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,098	2,5	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,245		18L-18R	Center = 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,066	2,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,066	2,5	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,170		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,021	2,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,021	2,5	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,052		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

