



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 14-maalis-18
Pattern Type
Pattern Difficulty
Pattern Designer jkl
Pattern Volume (ml) 21,11

Surface Information

Surface Type Synthetic
Surface Brand
Age

Pattern Parameters

Pattern Number
Pattern Name KERA 2018
Mode Clean & Oil
Forward Speed Heavy Clean (Envoy)
Start Cleaner Spray 0
Start Squeegee 0
Start Oiling 6
Split Pattern


Supplies Information

Lane Cleaner Judge
Cleaner Mixture Ratio 6 : 1
Cleaner Transition Distance Authority22
Cleaner Spray End Distance 54 Envoy
Lane Conditioner DEFYv30

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 7 Pin Side, Board Number, and 10 Pin Side columns. Rows 1-8.

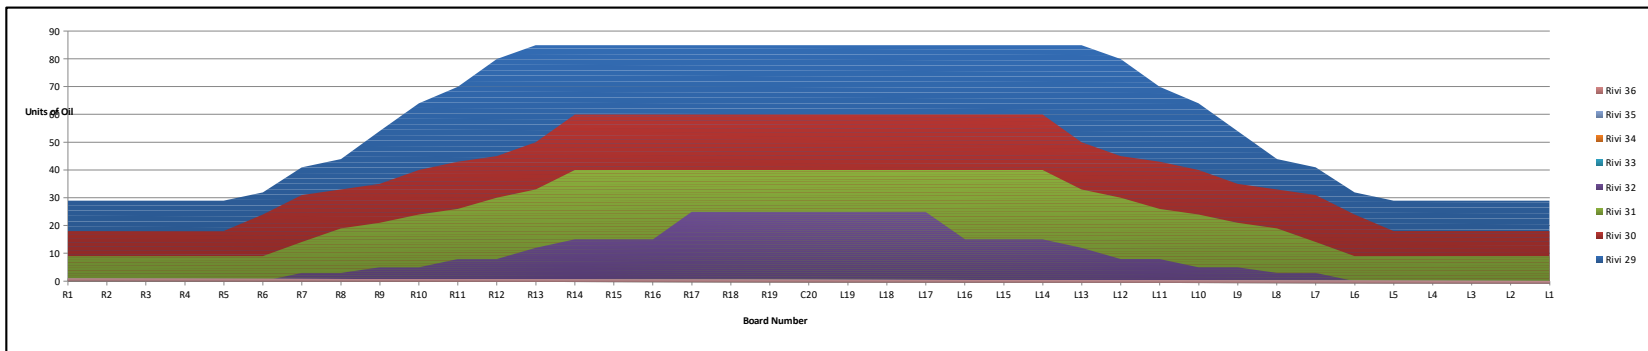



KERA 2018

Crosswise Ratios (by units)

Zone 1			Zone 5		
Average	Ratio		Average	Ratio	
3L-7L Left = 32,0	2,6		3L-7L Left = 0,0	#JAKO/0!	
3R-7R Right= 32,0	2,6		3R-7R Right= 0,0	#JAKO/0!	
18L-18R Center= 85,0			18L-18R Center= 0,0		
Zone 2			Zone 6		
Average	Ratio		Average	Ratio	
3L-7L Left = 21,8	2,7		3L-7L Left = #JAKO/0!	#JAKO/0!	
3R-7R Right= 21,8	2,7		3R-7R Right= #JAKO/0!	#JAKO/0!	
18L-18R Center= 60,0			18L-18R Center= #JAKO/0!		
Zone 3			Zone 7		
Average	Ratio		Average	Ratio	
3L-7L Left = 10,0	4,0		3L-7L Left = #JAKO/0!	#JAKO/0!	
3R-7R Right= 10,0	4,0		3R-7R Right= #JAKO/0!	#JAKO/0!	
18L-18R Center= 40,0			18L-18R Center= #JAKO/0!		
Zone 4			Zone 8		
Average	Ratio		Average	Ratio	
3L-7L Left = 0,6	41,6		3L-7L Left = #JAKO/0!	#JAKO/0!	
3R-7R Right= 0,6	41,6		3R-7R Right= #JAKO/0!	#JAKO/0!	
18L-18R Center = 25,0			18L-18R Center= #JAKO/0!		

Crosswise Ratios (by ml)

Zone 1			Zone 5		
Average	Ratio		Average	Ratio	
3L-7L Left = 0,134	2,6		3L-7L Left = 0,000	#JAKO/0!	
3R-7R Right= 0,134	2,6		3R-7R Right= 0,000	#JAKO/0!	
18L-18R Center = 0,356			18L-18R Center= 0,000		
Zone 2			Zone 6		
Average	Ratio		Average	Ratio	
3L-7L Left = 0,091	2,7		3L-7L Left = 0,000	#JAKO/0!	
3R-7R Right= 0,091	2,7		3R-7R Right= 0,000	#JAKO/0!	
18L-18R Center= 0,251			18L-18R Center= 0,000		
Zone 3			Zone 7		
Average	Ratio		Average	Ratio	
3L-7L Left = 0,042	4,0		3L-7L Left = 0,000	#JAKO/0!	
3R-7R Right= 0,042	4,0		3R-7R Right= 0,000	#JAKO/0!	
18L-18R Center= 0,168			18L-18R Center = 0,000		
Zone 4			Zone 8		
Average	Ratio		Average	Ratio	
3L-7L Left = 0,001	41,6		3L-7L Left = 0,000	#JAKO/0!	
3R-7R Right= 0,001	41,6		3R-7R Right= 0,000	#JAKO/0!	
18L-18R Center = 0,052			18L-18R Center= 0,000		

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

