



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 4-helmi-19
Pattern Type:
Pattern Difficulty:
Pattern Designer: JKH
Pattern Volume (ml): 22,99

Pattern Parameters

Pattern Number:
Pattern Name: Unelmakaadot 2019
Mode: Clean & Oil
Forward Speed: Max Clean
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern:

Supplies Information

Lane Cleaner: Judge
Cleaner Mixture Ratio: 6 : 1
Cleaner Transition Distance: Authority22
Cleaner Spray End Distance: 54 Envoy
Lane Conditioner: DefyV30


Surface Information

Surface Type: Synthetic
Surface Brand:
Age:

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 33 columns (7 Pin Side, Board Number, 10 Pin Side).

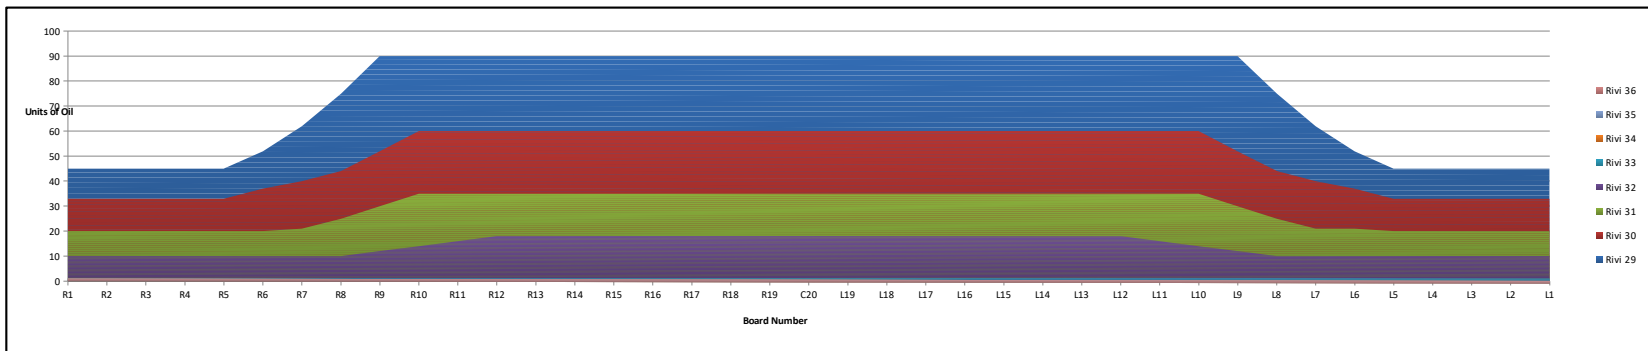



Unelmakaadot 2019

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 49,8	1,8	3L-7L	Left = 1,0	1,0
3R-7R	Right = 49,8	1,8	3R-7R	Right = 1,0	1,0
18L-18R	Center = 90,0		18L-18R	Center = 1,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 35,2	1,7	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 35,2	1,7	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 60,0		18L-18R	Center = #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 20,4	1,7	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 20,2	1,7	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 35,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 10,0	1,8	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 10,0	1,8	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 18,0		18L-18R	Center = #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,167	1,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,167	1,8	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,302		18L-18R	Center = 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,148	1,7	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,148	1,7	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,251		18L-18R	Center = 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,060	1,7	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,059	1,7	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,103		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,034	1,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,034	1,8	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,060		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

