



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date, Pattern Type, Pattern Difficulty, Pattern Designer, Pattern Volume (ml) 18,90

Surface Information

Surface Type Synthetic, Surface Brand, Age

Pattern Parameters

Pattern Number, Pattern Name Edellistä parempi keli, Mode Clean & Oil, Forward Speed Heavy Clean (Envoy), Start Cleaner Spray 0, Start Squeegee 0, Start Oiling 6, Split Pattern


Supplies Information

Lane Cleaner Judge, Cleaner Mixture Ratio 6 : 1, Cleaner Transition Distance Authority22, Cleaner Spray End Distance 54 Envoy, Lane Conditioner DEFYv30

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio L/R, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 33 columns (7 Pin Side, Board Number, 10 Pin Side).

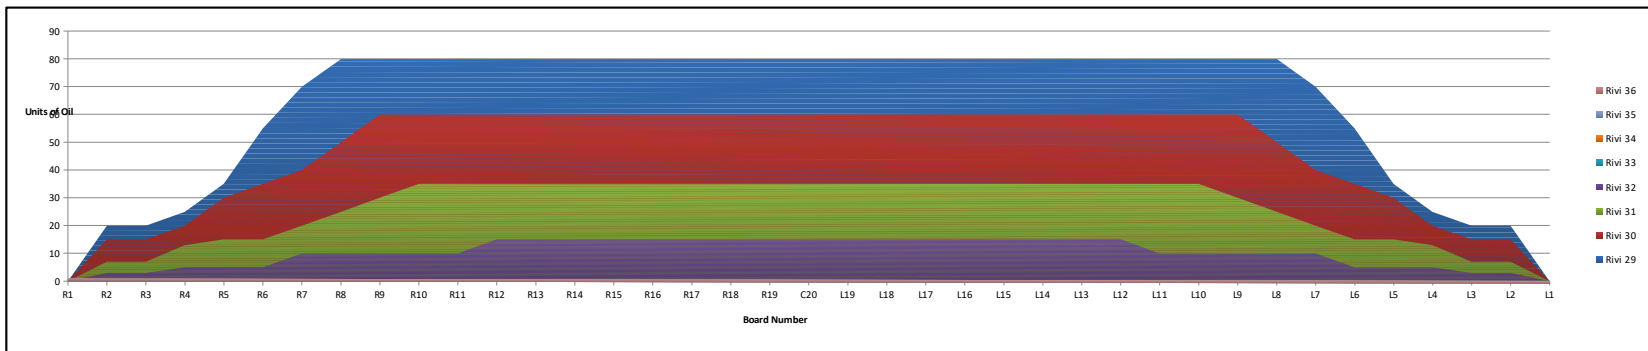



Edellistä parempi keli

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 41,0	1,9	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 41,0	1,9	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 80,0		18L-18R	Center= #JAKO/0!	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 28,0	2,1	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 28,0	2,1	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 60,0		18L-18R	Center= #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 14,0	2,5	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 14,0	2,5	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 35,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 5,6	2,6	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 5,6	2,6	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 15,0		18L-18R	Center= #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,137	1,9	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,137	1,9	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,268		18L-18R	Center= 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,106	2,1	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,106	2,1	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,226		18L-18R	Center= 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,041	2,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,041	2,5	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,103		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,014	2,6	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,014	2,6	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,038		18L-18R	Center= 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

