





## Kukl Mestarus

### Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 22,0	3,6	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right= 22,0	3,6	3R-7R	Right= 0,0	#JAKO/0!
18L-18R	Center = 80,0		18L-18R	Center= 0,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 12,0	5,4	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 12,0	5,4	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 65,0		18L-18R	Center= #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 2,8	16,7	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 2,8	16,7	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 47,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 1,4	25,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 1,4	25,0	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 35,0		18L-18R	Center= #JAKO/0!	

### Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,083	3,6	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,083	3,6	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,302		18L-18R	Center= 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,035	5,4	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,035	5,4	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,191		18L-18R	Center= 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,007	21,3	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,007	21,3	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,158		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,002	58,3	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,002	58,3	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,088		18L-18R	Center= 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.



