



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 27-touko-22
Pattern Type
Pattern Difficulty
Pattern Designer
Pattern Volume (ml) 19,42

Surface Information

Surface Type Synthetic
Surface Brand Brunswick Pro Lane
Age

Pattern Parameters

Pattern Number
Pattern Name Mest 2023
Mode Clean & Oil
Forward Speed Heavy Clean (Envoy)
Start Cleaner Spray 0
Start Squeegee 0
Start Oiling 6
Split Pattern


Supplies Information

Lane Cleaner Judge
Cleaner Mixture Ratio 6 : 1
Cleaner Transition Distance Authority22
Cleaner Spray End Distance 50 Envoy
Lane Conditioner hp209hv

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 7 Pin Side, Board Number, and 10 Pin Side columns. Rows 1-8.

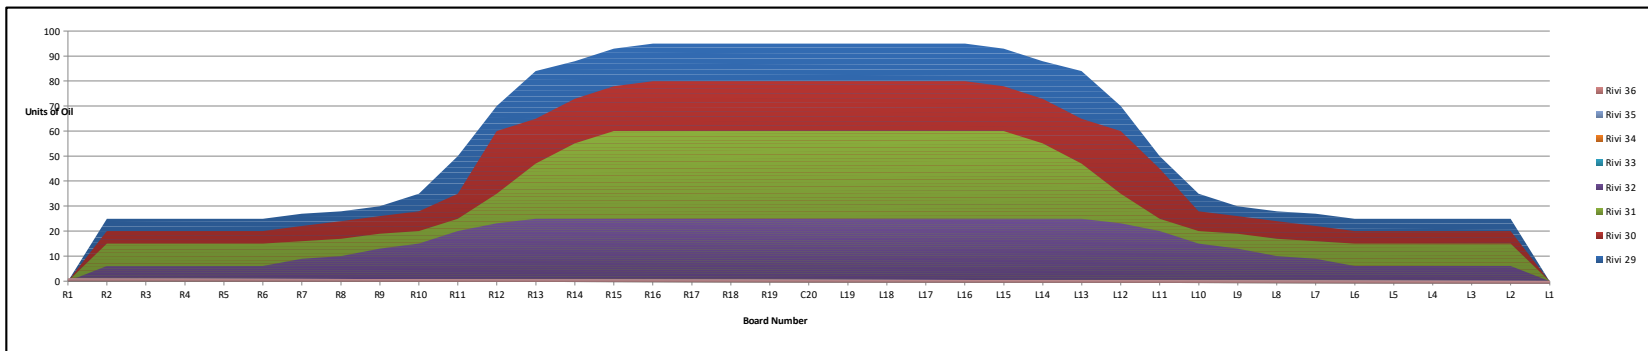



## Mest 2023

### Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 25,4	3,7	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right= 25,4	3,7	3R-7R	Right= 0,0	#JAKO/0!
18L-18R	Center= 95,0		18L-18R	Center= 0,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 20,4	3,9	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 20,4	3,9	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 80,0		18L-18R	Center= #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 15,2	3,9	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 15,2	3,9	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 60,0		18L-18R	Center= #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 6,6	3,7	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 6,6	3,7	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 25,0		18L-18R	Center= #JAKO/0!	

### Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,106	3,7	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,106	3,7	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,398		18L-18R	Center= 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,043	3,9	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,043	3,9	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,168		18L-18R	Center= 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,057	3,9	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,057	3,9	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,226		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,022	3,7	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,022	3,7	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,084		18L-18R	Center= 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

