



**DIRECT+**  
Conditioning System



**ENVOY**



**AUTHORITY22**<sup>®</sup>

Select Machine

**Pattern Information**

Date: 4-joulu-18  
 Pattern Type:   
 Pattern Difficulty:   
 Pattern Designer: JKH  
 Pattern Volume (ml): 21,08

**Surface Information**

Surface Type: Synthetic  
 Surface Brand:   
 Age:

**Pattern Parameters**

Pattern Number:   
 Pattern Name: Kuki 2018  
 Mode: Clean & Oil  
 Forward Speed: Heavy Clean (Envoy)  
 Start Cleaner Spray: 0  
 Start Squeegee: 0  
 Start Oiling: 6  
 Split Pattern:


**Supplies Information**

Lane Cleaner: Judge  
 Cleaner Mixture Ratio: 6 : 1  
 Cleaner Transition Distance: Authority22  
 Cleaner Spray End Distance: 54 Envoy  
 Lane Conditioner: DEFYv30

Notes: \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_

Zone	1	2	3	4	5	6	7	8
Zone End Distance	15	22	24	29	32	40		
Zone Ratio L	5,3 : 1	5,6 : 1	6,0 : 1	8,0 : 1	14,7 : 1	1,0 : 1	### : 1	### : 1
Zone Ratio R	5,3 : 1	5,6 : 1	6,0 : 1	8,0 : 1	14,7 : 1	1,0 : 1	### : 1	### : 1
Zone Volume (ml)	10,42	4,77	4,62	1,91	0,71	0,00	0,00	0,00

ZONE	7 Pin Side														Board Number								10 Pin Side																	
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1	
1	1	10	10	10	10	20	20	20	20	29	45	72	75	75	75	75	75	75	75	75	75	75	75	75	75	75	75	72	45	29	20	20	20	20	10	10	10	10	1	
2	1	9	9	9	9	19	19	19	19	29	45	72	74	74	74	74	74	74	74	74	74	74	74	74	74	74	74	72	45	29	19	19	19	19	9	9	9	9	1	
3	1	8	8	8	8	18	18	18	18	28	45	72	73	73	73	73	73	73	73	73	73	73	73	73	73	73	72	45	28	18	18	18	18	8	8	8	8	1		
4	1	5	5	5	5	15	15	15	15	25	40	45	72	72	72	72	72	72	72	72	72	72	72	72	72	72	72	45	40	25	15	15	15	15	5	5	5	5	1	
5	1	4	4	4	4	5	5	10	12	15	20	30	60	65	65	65	65	65	65	65	65	65	65	65	65	65	60	30	20	15	12	10	5	5	4	4	4	4	1	
6	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
7																																								
8																																								

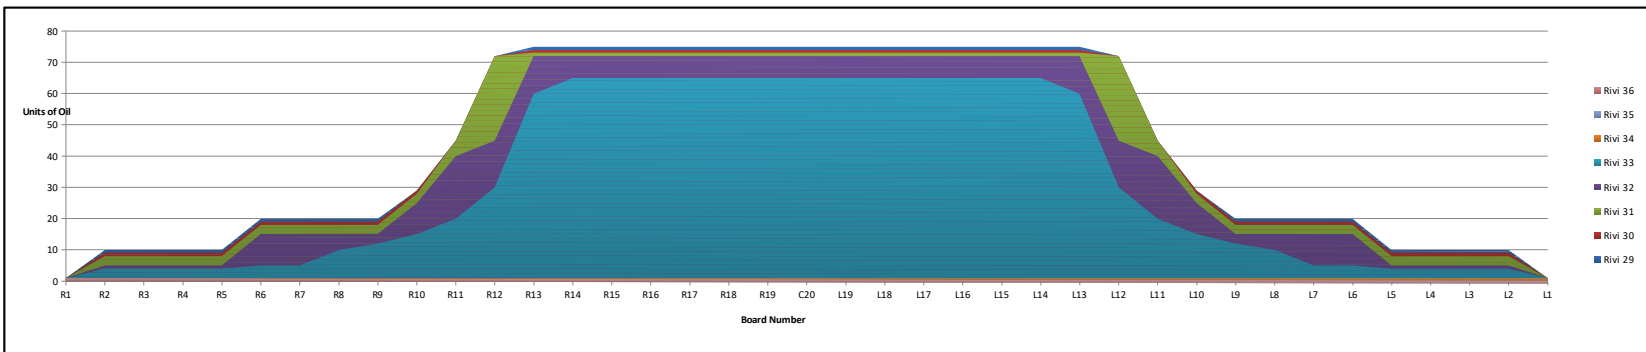



## Kukl 2018

### Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 14,0	5,3	3L-7L	Left = 4,4	14,7
3R-7R	Right = 14,0	5,3	3R-7R	Right = 4,4	14,7
18L-18R	Center = 75,0		18L-18R	Center = 65,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 13,0	5,6	3L-7L	Left = 1,0	1,0
3R-7R	Right = 13,0	5,6	3R-7R	Right = 1,0	1,0
18L-18R	Center = 74,0		18L-18R	Center = 1,0	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 12,0	6,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 12,0	6,0	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 73,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 9,0	8,0	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 9,0	8,0	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 72,0		18L-18R	Center = #JAKO/0!	

### Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,088	5,3	3L-7L	Left = 0,006	14,7
3R-7R	Right = 0,088	5,3	3R-7R	Right = 0,006	14,7
18L-18R	Center = 0,472		18L-18R	Center = 0,082	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,038	5,6	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,038	5,6	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,217		18L-18R	Center = 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,010	6,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,010	6,0	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,061		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,019	8,0	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,019	8,0	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,151		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

